


REFURBISHMENT OF BRICKWORK – NOT EXPOSED TO WATER PRESSURE

Constructed in masonry or concrete

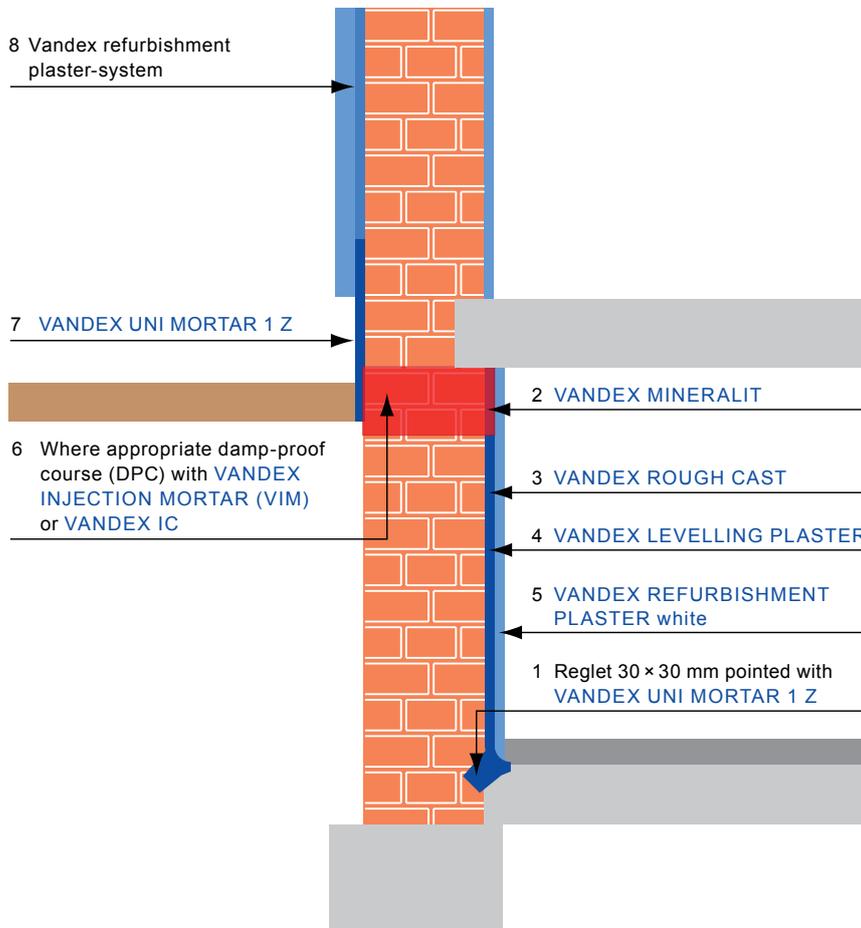

Application Instructions

- Optional: Chisel out a reglet (approx. 30 × 30 mm) along the slab/wall junction and point with a suitable mortar, preferably with VANDEX UNI MORTAR 1 Z.
- Treat substrate with VANDEX MINERALIT depending on substrate condition.
- Apply an open textured VANDEX ROUGH CAST as bonding bridge, covering 50 % of the surface.
- Apply VANDEX LEVELLING PLASTER as a levelling and salt inhibiting plaster.
- For improved aesthetic quality, apply VANDEX REFURBISHMENT PLASTER white.
- Where appropriate install a horizontal damp-proof course with VANDEX INJECTION MORTAR (VIM) or VANDEX IC.
- Treat the splash zone with one layer VANDEX UNI MORTAR 1 Z.
- Apply the Vandex refurbishment plaster system.

Remarks:

- Substrate adhesion strength > 1.5 N/mm²
- Salt treatment depending on salt analysis results

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.