


SHUTTER TIE HOLES

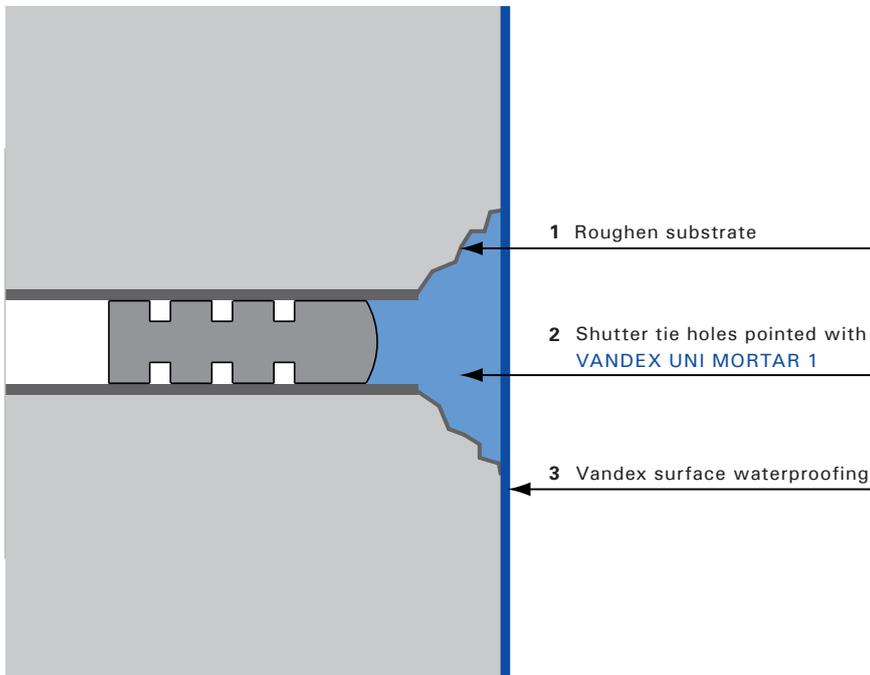

Application Instructions

- 1 The smooth concrete surface of cleared shutter tie holes must be roughened by appropriate means.
- 2 Point the conical holes with VANDEX UNI MORTAR 1 to flush.
- 3 When the mortar has set, apply Vandex surface waterproofing lining in accordance with the relevant specification.

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.