


## POTABLE WATER TREATMENT PLANT – REFURBISHMENT

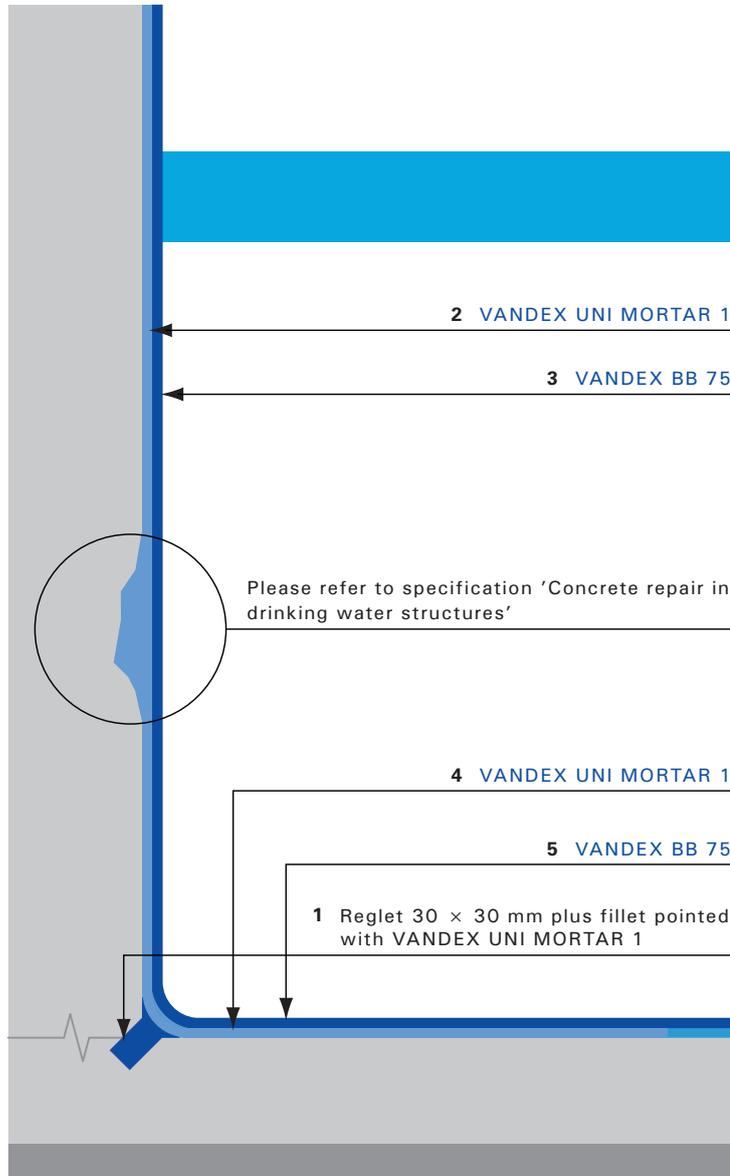

### Application Instructions

**1 Optional:** Chisel out a reglet (approx. 30 × 30 mm) along construction joints. Point the reglet and form a fillet with a suitable mortar, preferably with VANDEX UNI MORTAR 1.

#### Vertical surfaces:

**2** Apply one layer of VANDEX UNI MORTAR 1 as surface leveller, also to increase concrete cover to reinforcement.

**3** Apply two coats of VANDEX BB 75 as final lining.

#### Horizontal surfaces:

**4** Apply one layer of VANDEX UNI MORTAR 1 as surface leveller, also to increase concrete cover to reinforcement.

**5** Apply two coats of VANDEX BB 75 as final lining.

#### Alternative:

- Where an increased aesthetic quality is required, replace VANDEX BB 75 by VANDEX BB WHITE.

#### Remark:

- Substrate adhesion strength > 1.5 N/mm<sup>2</sup>

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.