


## SEWER – MANHOLE REFURBISHMENT

Constructed in masonry or concrete

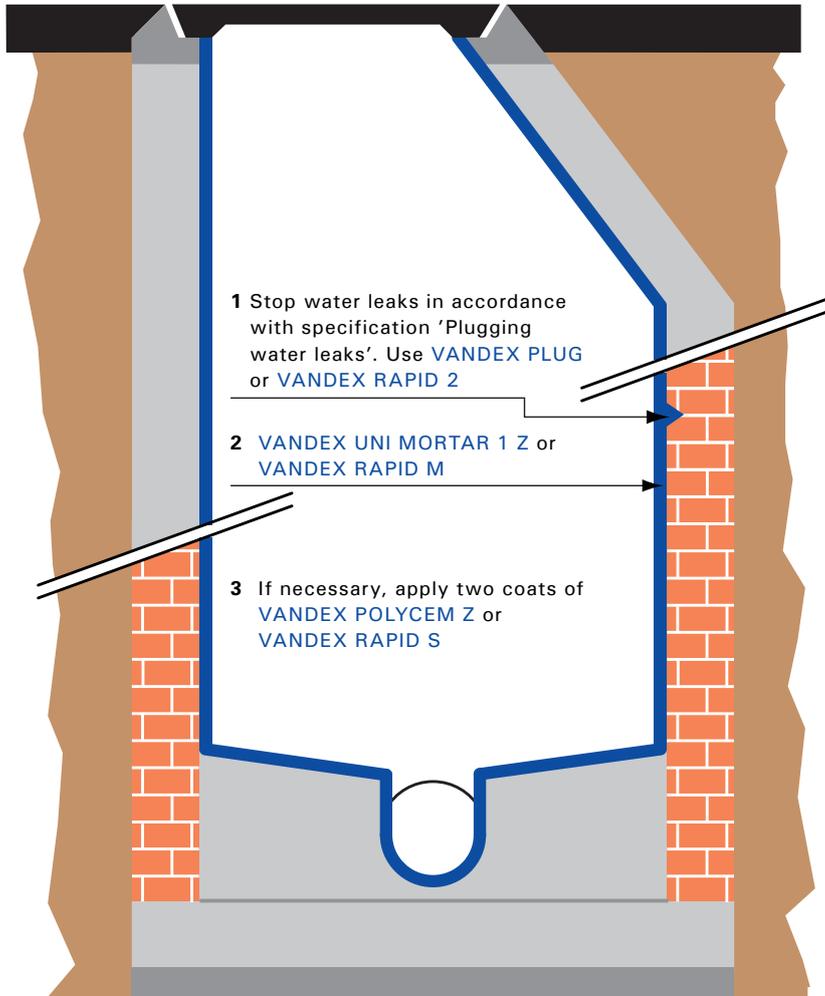

### Application Instructions

- 1 Plug water leaks in accordance with the specification 'Plugging water leaks'. Use **VANDEX PLUG**, **VANDEX RAPID 2** or **VANDEX 4V**
- 2 Apply one layer of **VANDEX UNI MORTAR 1 Z** or **VANDEX RAPID M** to the internal surfaces.
- 3 Where required, apply two coats of **VANDEX POLYCEM Z** or **VANDEX RAPID S**.

### Remark:

- Substrate adhesion strength > 1.5 N/mm<sup>2</sup>

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.