


MULTI STORY CAR PARK

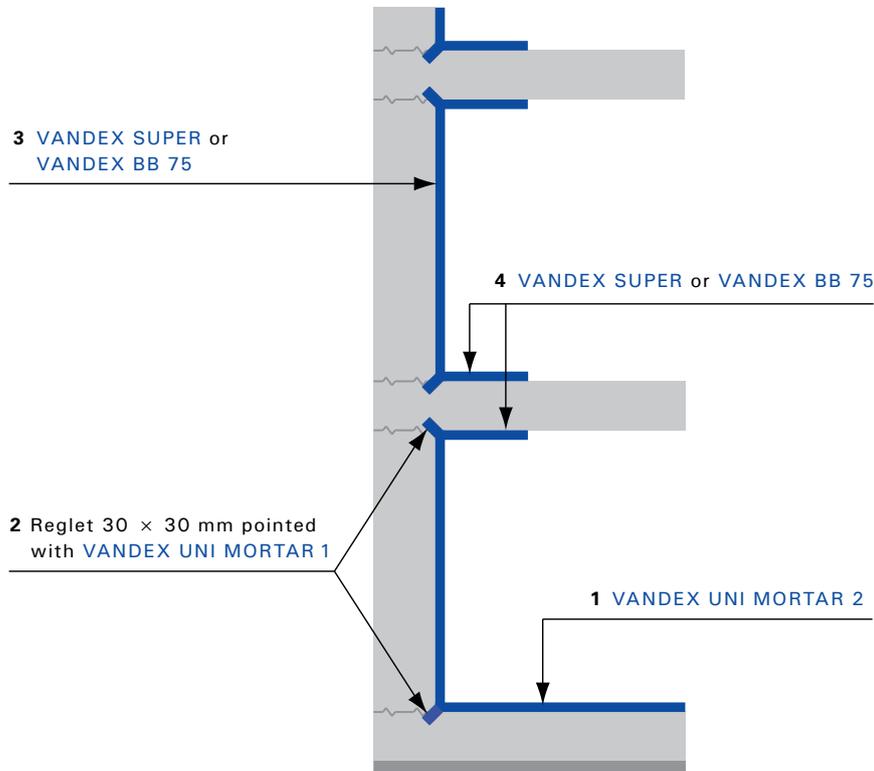

Application Instructions

- 1** Apply a waterproof screed of VANDEX UNI MORTAR 2 to the base slab.
- 2 Optional:** Chisel out a reglet (approx. 30 × 30 mm) along the construction joints. Fill the cleaned reglet with a suitable mortar, preferably with VANDEX UNI MORTAR 1 such that it is flush with the surface.
- 3** Apply two coats of VANDEX SUPER to the interior wall surfaces, alternatively: Two coats of VANDEX BB 75. Apply the second coat whilst the first is still green.
- 4** Apply two coats of VANDEX SUPER or VANDEX BB 75 in a stripe approx. 0.6 m wide to the perimeter of the floor surfaces at the same rate as **3** above.

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.