


LIFT PIT

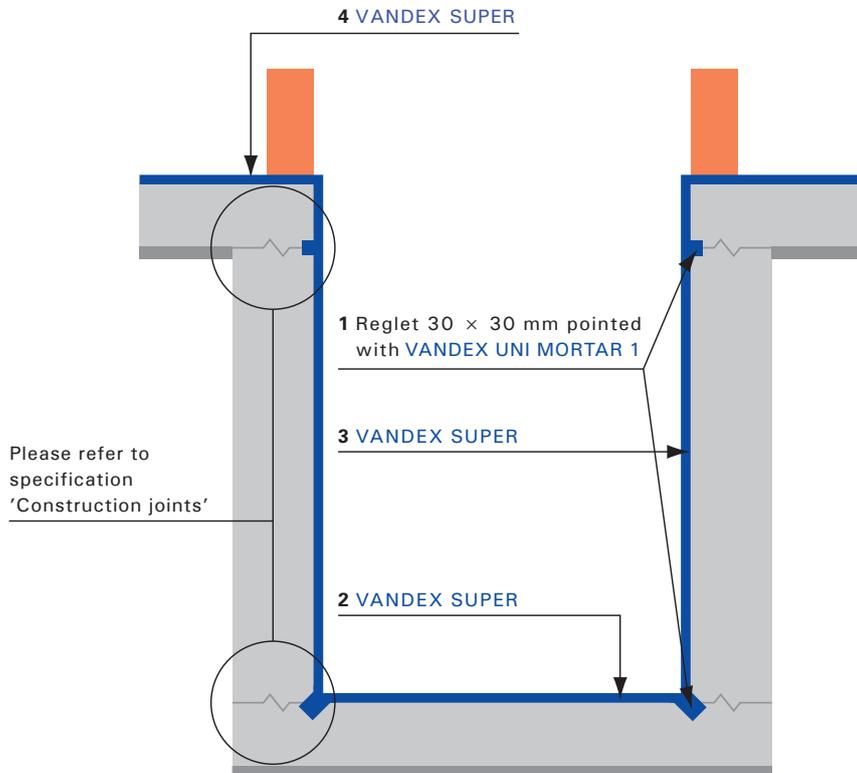

Application Instructions

- 1 Optional:** Chisel out a reglet (approx. 30 × 30 mm) along the construction joints. Fill the reglet with a suitable mortar, preferably with VANDEX UNI MORTAR 1, such that it is flush with the surface.
- 2** Apply one coat of VANDEX SUPER to the slab surface.
- 3** Apply two coats of VANDEX SUPER to the interior wall surfaces.
- 4** Apply one coat of VANDEX SUPER to main slab surface.

Alternative:

- Where a better aesthetic appearance of the waterproofing lining is desired, replace VANDEX SUPER by VANDEX SUPER WHITE

Remark:

- Substrate adhesion strength > 1.5 N/mm²

For further technical details and consumptions refer to technical data sheet or consult a technical Vandex representative.

The information contained herein is based on our long-term experience and the best of our knowledge. We can, however, make no guarantee since for a successful outcome, all circumstances in an individual case must be taken into consideration. Indications of quantities required are only averages which in certain cases might be greater.